

WV3918 Software Update Application Note

1. Connect mini-USB with PC UART tool on WV-3918



2. Copy the new software to the root directory of burnttool


- ☐ root.sqsh4
- ☐ uImage
- ☐ usr.jffs2
- ☐ usr.sqsh4

3. Open BurnTool Software


Double-click BurnTool application to enter the GUI interface



- Short GND and BOOT-MODE pin and power up WFV-3918 at the same time. The picture shown here is using a tweezer to connect the two test points.

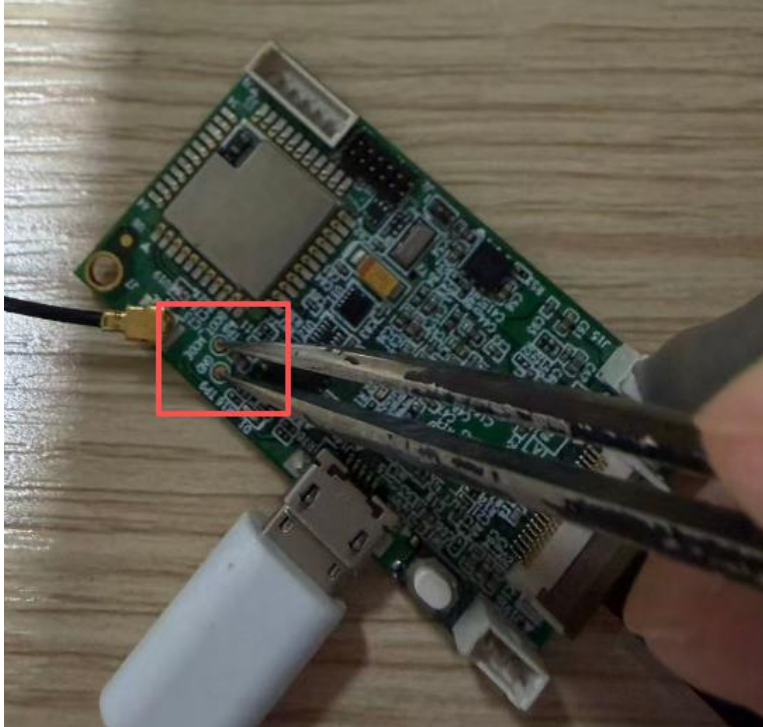

- BurnTool starts running after test-point short is released.

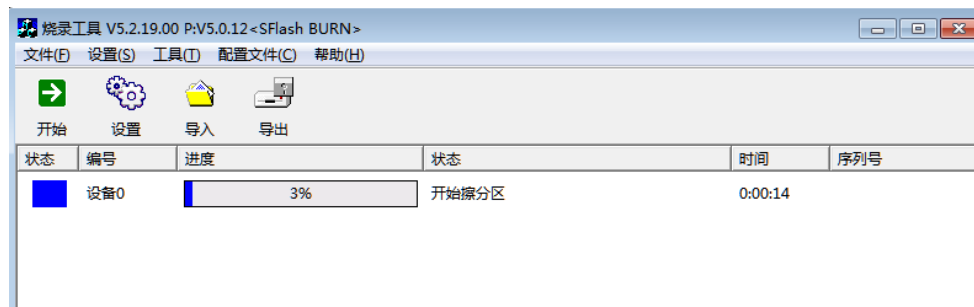

- Wait until the status bar is completed.

