

WFV3918 Software Update Application Note

1. Connect mini-USB with PC UART tool on WFV-3918




2. Open BurnTool Software

Double-click BurnTool application to enter the GUI interface



3. Short TP9 (GND) and TP8 (BOOT-MODE) pin and power up WFV-3918 at the same time. The picture shown here is using a tweezer to connect the two test points.

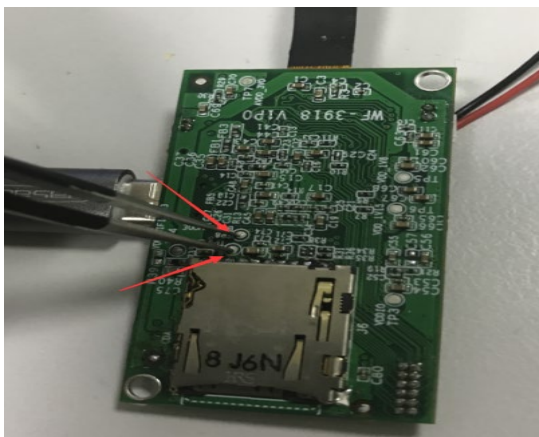

4. BurnTool starts running after test-point short is released.

状态	编号	进度	状态	时间	序列号	MAC
	设备0	<div><div>4%</div></div>	开始下载producer	0:00:03		



5. Wait until the status bar is completed.

状态	编号	进度	状态	时间	序列
	设备0	<div><div>100%</div></div>	烧录完成	0:00:37	

